

TAG DESCRIPTION TABLE

83495B1CV4D2P0 (docjg)

10 September 2001

abbrsect

Abbreviation Section

Description: Identifies the paragraph used to define abbreviations/acronyms and the associated list.

Source paragraph: 4.3.4 & 4.5.9

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*), (abbrtitle?,acronymlist))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

abbrtitle

Abbreviation Title

Description: Identifies the title for the list of acronyms and abbreviations.

Source paragraph: 4.3.4 & 4.5.9

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

acronym

Acronym/Abbreviation Definition

Description: Identifies the first time an acronym or abbreviation is used in a chapter. The "def" part of the acronym is used to define the acronym/abbreviation, while the "term" part of the acronym contains the actual acronym/abbreviation. Within the text, the "term" portion will be surrounded with parenthesis.

Source paragraph: 4.3.4 & 4.5.9

Content Model: (def, term)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

acronymlist

Acronym/Abbreviation List

Description: Identifies the list of acronyms and abbreviations.

Source paragraph: 4.3.4 & 4.5.9

Content Model: (term, def) *

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
rtermwidth	NUTOKEN	2.5IN	Allows you to set the right term width.
ltermwidth	NUTOKEN	1IN	Allows you to set the left term width.
autobuild	CDATA	#CONREF	Allows you to automatically build this list.

activity

Reporting Activity

Description: Identifies the activity submitting a technical publication deficiency report list.

Source paragraph: 4.5.9

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

addata

Additional Data

Description: All other technical data required in the function.

Source paragraph: 3.4.3.2.1.1.8 MIL-PRF-83495B Amendment 1

Content Model: (para+ | none | refertab)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

addcontents

Add contents

Description: Added to the contentsentry to allow other TOs to be illustrated in the table of contents per the authors disgression.

Source paragraph: 3.4.3.1.1 MIL-PRF-83495B Amendment 1

Content Model: (chaptitle, functitle+)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level

delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

address

Change Sheet Name/Address

<i>Description:</i>	Identifies the name and address of the activity responsible for preparation of the change instruction sheet.
<i>Source paragraph:</i>	4.7.3.10.2
<i>Content Model:</i>	(#PCDATA change tabmat ftnref xref verbatim emphasis applicabil graphic extref dataiden hcp hci esds nsp oci ocp fcp acronym prindex secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

appendix

Appendix

<i>Description:</i>	Identifies an appendix to the manual.
<i>Source paragraph:</i>	4.2.9.6
<i>Content Model:</i>	title, para0+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
--------	--	----------	---

appl

Applicability

Description: Defines the applicability codes.

Source paragraph: 3.4.3.2.1.1.1 MIL-PRF-83495B Amendment 1

Content Model: ((para)+ | (applichd?, applic+)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

applic

Applicability/Effectivity Definition Entry

Description: Defines applicability/effectivity markings.

Source paragraph: 4.3f & 4.5.9

Content Model: (term, def)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

NONE

applicabil

Applicability/Effectivity

Description: Identifies a portion of text as being applicable to a specific model, serial number, part number, etc. Use of this element will cause the applicabilty/effectivity markings defined in the applicability definition (applicdef) to appear at that point in running text.

Source paragraph: 4.3f

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

applicdef

Applicability/Effectivity Definition

Description: Identifies the paragraph used to define applicability/effectivity markings, and the associated list.

Source paragraph: 4.3f

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*), (applttitle?, applchd?, applic+))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
rtermwidth	NUTOKEN	2.5IN	Allows you to set the right term width.

Itemwidth	NUTOKEN	1IN	Allows you to set the left term width.
-----------	---------	-----	--

applichd

Applicabilty/Effectivity List Column Headings

Description: Defines the column headings used for the applicabilty/effectivity list.

Source paragraph: 4.3f

Content Model: (term, def)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

appltile

Applicability/Effectivity Definition

Description: Identifies the title for the applicabilty/effectivity list.

Source paragraph: 4.3f

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

authnot

Authority Notice

Description: Identifies the authority notice at the bottom of the title page.

Source paragraph: 4.5.1.15

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

auxfront

Front matter for volumes/parts

Description: Identifies the front matter that appears in second and subsequent volumes, and second and subsequent parts in a volume.

Source paragraph: 4.2.9.1

Content Model: (idinfo, warnpage?, chginssht?, (lep | vollep), verstat?, tpdr?, chgrec?, contents, illuslist?, tablelist?, (foreword | preface | intro)?, safesum?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

body

Body

Description: Identifies the portion of the manual where chapters are used, exclusive of front matter and appendices, indexes, etc.

Source paragraph: 4.2.9.3 & 4.5.1.3.2 & 3.2.38

Content Model: (chapter, chapter+, ipbchap?, ddchapter?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
numcols	(1 2)	#REQUIRED	Set body to either one column or two columns.

brk

Break

Description: This element is used to indicate that a column, line, or page break should be forced at that point. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: NONE

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
type	(COL LINE LINE NPG)		Allows you to define where you want the break to occur.

cage

Cage

Description: Defines the cage codes in the consumable tables.

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

callout

Callout

Description: Identifies significant features on illustrations.

Source paragraph: 4.6.16 & 4.3.1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

caution

Caution

Description: Identifies a CAUTION in the manual.

Source paragraph: 4.3.10

Content Model: (para*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type

inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	EMPTY DELETED RESERVED NOTAPP	#IMPLIED	Allows you to specify the status of this element.

change

Changed Information

Description: Identifies material that has been changed. In order to add material, the "type" attribute should be set to "add", and the "change" element should surround the added material. In order to delete material where a complete history of all changes to the document are being preserved, the "type" attribute should be set to "delete" and the "change" element should surround the deleted material. If all changes are not being preserved, change the material and surround it with a "change" element, setting the "type" attribute to "add".

Source paragraph: 4.7.3.9

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
change	(ADD DELETE)	ADD	Allows you to add or delete a change.
mark	NUMBER	1	Allows you the option to mark your changes.

chapno

Chapter Number

Description: Defines the chapter number in the job guide index.

Source paragraph: 3.4.4 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chap

Chapter Title For Job Guide Index

Description: Defines the chapter title in the job guide index.

Source paragraph: 3.4.4 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chapter

Chapter

Description: Identifies a chapter.

Source paragraph: 4.2.9.3

Content Model: (title, ((section, section+) | para0+))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

chaptercontinue

Chapter Continue

Description: Identifies a chapter that is continued in a new volume.

Source paragraph:

Content Model: (function+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
chapcontstart	NUMBER	#IMPLIED	Value used to start a continued chapter in a new volume.
lastpagenum	NUMBER	#IMPLIED	Allows you to continue the correct page number onto a new book/volume.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

chaptitle

Chapter Title

Description: Defines the chapter title in the addcontents element.

Source paragraph: 3.4.3.1.1 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil |
graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |
acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chgdate

Change Date

Description: Identifies the date of the latest change.

Source paragraph: 4.5.1.17

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chghist

Change History

Description: Identifies the beginning of the change history dates. The first date in the chghist is the original date and subsequent dates are change 1, change 2, etc.

Source paragraph: 4.5.3

Content Model: (date+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chginssht

Change Instruction Sheet

Description: Identifies the change instruction sheet.

Source paragraph: 4.7.3.10.2

Content Model: (chgunum, address, date, prtitle, effdatenot?, discl?, distrib, expcont?, destr?, chgpara+, chglist, sigblock?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chglist

Change List

Description: Identifies the "Remove Pages" and "Insert Pages" columns on the change instruction sheet.

Source paragraph: 4.7.3.10.2

Content Model: (tabmat | (removepg, insertpg)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chgpara

Change para

Description: Identifies the paragraph change status.

Source paragraph: 4.7.3.11.2

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chgnum

Change Number/Letter

Description: Identifies the latest change number/letter.

Source paragraph: 4.7.3.1, 4.2.1.4.2.3, 4.5.1.17, & 4.5.3.1

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

chgrec

Change Record

Description: Identifies the change record page. This page will be an empty table whose contents will be completed by the person filing the change pages in the manual. The change record page will be automatically generated by the FOSI.

Source paragraph: 4.5.5

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

clreq

Checklist Requirements

Description: Defines the checklist requirements in the input conditions.

Source paragraph: 3.4.3.2.1.1.7 MIL-PRF-83495B Amendment 1

Content Model: (para+ | none)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

cogact

Cognizant Field Activity

Description: Identifies Cognizant Field Activity on the title page and is included in the distribution statement. This is a Navy requirement.

Source paragraph: 4.5.1.11

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

colspec

Column Specification

Description: Defines a column in a table. Each column must have a column specification. The column specification defines the width of the column and an optional name used when column is starting or ending a horizontal span or referenced in a table entry. Column specifications in a table group apply to the table heading (boxheads) and the table body. The table heading can redefine the column specifications if needed, however, the table body must use the column specifications defined in the table group.

Source paragraph: 4.3.9

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
colname	NMTOKEN	#IMPLIED	Allows you to assign a name to a column.
colnum	NUMBER	#IMPLIED	Allows you to assign a number to a column.
align	(LEFT RIGHT CENTER JUSTIFY CHAR)	#IMPLIED	Allows you to align entered text.
charoff	NUTOKEN	#IMPLIED	Determines the distance the cell content should offset from the horizontal alignment character.
char	CDATA	#IMPLIED	Alignment Character
leftmar	NUTOKEN	#IMPLIED	Allows you to define a left margin if desired.
rightmar	NUTOKEN	#IMPLIED	Allows you to define a right margin if desired.
topmar	NUTOKEN	#IMPLIED	Allows you to define a top margin if desired.
botmar	NUTOKEN	#IMPLIED	Allows you to define a bottom margin if desired.
mindepth	NUTOKEN	#IMPLIED	Allows you to define a minimum depth if desired.
colwidth	CDATA	#IMPLIED	Allows you to define the column widths.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to separate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to separate rows.

consum

Consumables

Description: Defines the consumable items in the input conditions.

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (consumtab | none)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

consumtab

Consumable Table

Description: Defines the consumable table in the input conditions.

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (nomen, (spec | partno), (cage | mfrnad), use, reference)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
frame	(TOP BOT- TOM TOPBOT ALL SIDES NONE)	ALL	Allows you to choose what type of table frame you need.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to separate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to separate rows.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
pgwide	NUMBER	1	Specifies if the table fills the page or column width. Set it equal to "0", it will fit in column.

id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
leftind	CDATA	#IMPLIED	Allows author to specify left indent if desired.
rightind	CDATA	#IMPLIED	Allows author to specify right indent if desired.
topmar	NUTOKEN	#IMPLIED	Allows author to specify top margin if desired.
botmar	NUTOKEN	#IMPLIED	Allows author to specify bottom margin if desired.
mindepth	NUTOKEN	#IMPLIED	Minimum cell depth
pgdeep	NUMBER	0	Specifies that the table will fit page depth
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

contents

Table of Contents

Description: Identifies the table of contents. For Army documents, the table of contents consists of chapter and section titles. For all other services, the table of contents consists of chapter, section, and paragraph titles. If an index is used, the table of contents consists of chapter, section, and primary paragraph titles. This information is automatically compiled by the FOSI.

Source paragraph: 4.5.6

Content Model: PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
autobuild	CDATA	#CONREF	Allows the contents to be automatically generated. Set autobuild="1".

contentsentry

Contents Entry

Description: Container tag for author inputted Table of contents.

Source paragraph: 3.4.3.1.1

Content Model: (tmidno, title, sssn*, addcontents?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

contractno

Contract Number

Description: Identifies the contract number on the title page.

Source paragraph: 4.5.1.4

Content Model: PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

copyright

Copyright Notice

Description: Identifies the copyright notice on the title page.

Source paragraph: 4.1.2 & 4.5.1.14

Content Model: PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

dataiden

Data Identification

Description: May be used to identify specific types of data (e.g. hazardous materials, special tools, etc.). Use of this element does not affect the formatted output, but is intended to be used in database functions and data searches.

Source paragraph: 4.5.1.7, 4.5.1.16, 4.5.1.17, & 4.5.3.1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

date

Date

Description: Identifies a date.

Source paragraph: 4.5.1.17 & 4.5.9.4b

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

dateinc

Date Incorporated

Description: Identifies the date the information affected by the directive or engineering change proposal was incorporated into the manual.

Source paragraph: 4.5.9.4d

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ddchapter

Difference Data Chapter

Description: Identifies the difference data chapter.

Source paragraph: 4.7.3.3

Content Model: (dddesc, (ddindex, ddsheet+)?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

dddesc

Difference Data Description

Description: Identifies the lead-in information for the difference data chapter.

Source paragraph: 4.7.3.3

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
--------	--	----------	---

ddindex

Difference Data Index

Description: Identifies the paragraph used to lead-in to the difference data index, and it's associated list.

Source paragraph: 4.7.3.3.1

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*,ddlist)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ddlist

Difference Data List

Description: Identifies the listing of part numbers to corresponding difference data sheets.

Source paragraph: 4.7.3.3

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ddsheets

Difference Data Sheet

Description: Identifies a difference data sheet.

Source paragraph: 4.7.3.3

Content Model: ((nomen, (partno+ | modelno+ | typedes+), serno*), para0+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

def

Definition

Description: Identifies a term and definition in a list.

Source paragraph: 4.3.4

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

defhd

Definition List Column Headings

Description: Identifies the column headings for a definition list.

Source paragraph: 4.3.4

Content Model: (term, def)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

deflist

Definition List

Description: Identifies a two-column definition list. This element can be used when a listing is needed to define particular terms.

Source paragraph: 4.3.4

Content Model: (title?, defhd?, (term, def)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
rtermwidth	NUTOKEN	1.9IN	Allows you to set the right term width.
ltermwidth	NUTOKEN	0.7IN	Allows you to set the left term width.
autobuild	CDATA	#CONREF	Allows the contents to be automatically generated. Set autobuild="1".

destr

Destruction Notice

Description: Identifies the destruction notice on the title page.

Source paragraph: 4.5.1.13

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

discl

Disclosure Notice

Description: Identifies the disclosure notice on the title page. The title is automatically generated by the FOSI.

Source paragraph: 4.5.1.10

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

distrib

Distribution Statement

Description: Identifies the distribution statement. The title is automatically generated by the FOSI.

Source paragraph: 4.5.1.11

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
type	(A B C D E F X)	#IMPLIED	Displays what type of distribution code is used for the manual.

doc

Document

Description: Identifies the entire document (technical manual).

Source paragraph: 4.1.7

Content Model: ((volume, volume+) | (front, body, rear?))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
service	(AF NAVAIR NAVSEA SPAWARS ARMY MC DLA CG DOD)	#REQUIRED	Author must identify what service is used.
verstatpg	(VER UN-VER)	VER	Author can stipulate a verified or unverified manual
docstat	(REVISION CHANGE PRELIM DRAFT FORMAL)	PRELIM	Author can stipulate what form the manual is in.
docid	CDATA	#IMPLIED	Document identification

docjg

Job Guide

Description: Defines the root element of the Job Guide manual

Source paragraph: 3.4 MIL-PRF-83495B Amendment 1

Content Model: (front, (body | jgindex))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
chapstart	NUMBER	#IMPLIED	Author enters the chapter number if it beginning of the manual doesn't start at 1.
funcstart	NUMBER	#IMPLIED	Allows you to start a function number in a continued chapter, use with chapcontstart.
parastart	NUMBER	#IMPLIED	Allows you to start a para0 number in a continued gchapter, use with gchapcontstart.
pagesize	(5X8 8.5X11)	5X8	Author enters page size of the manual .
service	(AF NAVAIR NAVSEA SPAWAR ARMY MC DLA CG DOD)	#IMPLIED	Author must identify what service is used.
verstatpg	(VER UN-VER)	VER	Author can stipulate a verified or unverified manual
docstat	(REVISION CHANGE PRELIM DRAFT FORMAL)	PRELIM	Author can stipulate what form the manual is in.
docid	CDATA	#IMPLIED	Document identification

docpart

(Document) Part

Description: Identifies the next breakdown of a volume.

Source paragraph: 4.5.1

Content Model: ((front | auxfront), body, rear?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

docpartn

(Document) Part Number

Description: Specifies the number used to identify a (document) part

Source paragraph: NONE

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

doctype

Type of Manual

Description: Identifies the type of manual on the title page (e.g. maintenance instructions, illustrated parts breakdown, inspection manual, etc.).

Source paragraph: 4.1.7

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

downgrd

Downgrade Notice

Description: Identifies the classification downgrade notice on the title page.

Source paragraph: 4.4

Content Model: (phrase | oadr)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ecpno

Engineering Change Proposal Number

Description: Identifies the ECP Number in the record of applicable technical directives.

Source paragraph: 4.5.9.4

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

effdatenot

Effective Date Notice

Description: Identifies the effective date notice on the title page.

Source paragraph: 4.5.1.8

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

emphasis

Emphasis

Description: Identifies portions of text to be highlighted (e.g. underline, bold, etc.). This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: NONE

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
type	(U B BU BI Q X O SUP SUB U)	#REQUIRED	Displays different types of emphasis. u=underline b=bold bu=bold/underline i=italics bi=bold/italics q=quotes x=box o=strike out sup=superscript sub=subscript ui=underline/italics

entry

Table Entry

Description: Identifies a table entry (cell).

Source paragraph: 4.2.7

Content Model: ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil
| graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp |
acronym | prindex | secindex)+ | (randlist | deflist | seqlist) | warning |
caution | note)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
colname	NMTOKEN	#IMPLIED	Allows you to identify an name for each column.
spanname	NMTOKEN	#IMPLIED	Allows you to identify a span name for any columns spanned.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
morerows	NUMBER	0	This allows you to add more rows.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to seperate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to seperate rows.
rotate	NUMBER	0	Allows you to rotate text in a column.
valign	(TOP MIDDLE BOTTOM)	#IMPLIED	Allows you to vertically align text within a row.
align	(LEFT RIGHT CENTER JUSTIFY CHAR)	#IMPLIED	Allows you to align text within a column.
charoff	NUTOKEN	#IMPLIED	Determines the distance the cell content should offset from the horizontal alignment character.
char	CDATA	#IMPLIED	Alignment Character

entrytbl

Entry Table

Description: Identifies a table within a table entry. This element allows a table cell to be divided into a sub-table, with its own set of rows, columns, and entries. Use of this element basically allows the author to create a table within a table.

Source paragraph: 4.2.7

Content Model: (colspec*, spanspec*, thead?, tbody)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

cols	NUMBER	#REQUIRED	Allows you to identify how many columns.
colname	NMTOKEN	#IMPLIED	Allows you to identify an name for each column.
spanname	NMTOKEN	#IMPLIED	Allows you to identify a span name for any columns spanned.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to seperate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to seperate rows.
rotate	NUMBER	0	Allows you to rotate text in a column.
align	(LEFT RIGHT CENTER JUSTIFY CHAR)	#IMPLIED	Allows you to align text within a column.
charoff	NUTOKEN	#IMPLIED	Determines the distance the cell content should offset from the horizontal alignment character.
char	CDATA	#IMPLIED	Alignment Character

esds

Electrostatic Discharge Sensitive Symbol

Description: Identifies the ESDS symbol. Use of this element will cause the ESDS symbol to appear at that point in the running text. The "esds" attribute should be used to place the ESDS symbol between a paragraph/step number and text.

Source paragraph: 4.3.10.4

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

expcont

Export Control Notice

Description: Identifies the export control notice on the title page. Note that the export control notice entity (&expcontnot;) may be used in place of entering the text manually.

Source paragraph: 4.5.1.12

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

extref

External Reference

Description: Identifies a cross-reference to another document. Use of this element is optional in that the referenced document number may be entered without using this element.

Source paragraph: 4.3.1m

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
xrefid	IDREF	#REQUIRED	Allows the user to set up an external reference.

faultcode

Fault Code

Description: Defines the fault codes in the dot result

Source paragraph: 3.4.3.2.1 a MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

fcp

Fracture Critical Process

Description: Identifies fatigue and fracture critical parts.

Source paragraph: 4.3.8.5

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

figtable

Table within a figure

Description: Identifies a table contained within a figure, which does not have a table number or name, and does not appear in the list of tables. An example would be a component table on a schematic diagram.

Source paragraph: 4.3.9.1

Content Model: tgroup

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
frame	(TOP BOT-TOM TOPBOT ALL SIDES NONE)	ALL	Allows you to choose what type of table frame you need.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to separate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to separate rows.
tbwidth	NUTOKEN	#IMPLIED	Allows you to determine the table width.
tbdepth	NUTOKEN	#IMPLIED	Allows you to determine the table depth.
horrefpt	(LEFT RIGHT)	LEFT	Horizontal reference point.
verrefp	(VTOP VBOTTOM)	VTOP	Vertical reference point.
coordst	CDATA	0,10000	Coordinate start
assocfig	IDREF	#IMPLIED	Associate figure
place	INLINE FLOAT)	FLOAT	How to place graphic
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

figure

Figure

Description: Identifies an illustration.

Source paragraph: 4.2.8

Content Model: title, ((subfig, subfig+) | (graphic | figtable)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
place	INLINE FLOAT)	FLOAT	How to place graphic

fobrk

Foldout Break tag

Description: Added fobrk to be put after the foldout tag in the instance so the continued steps go to the next verso page

Source paragraph: N/A

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
brk	(NPG VPG)	VPG	Identifies which side of the page the foldout will occur.

foldout

Foldout

Description: Identifies a foldout.

Source paragraph: 4.2.4.1

Content Model: title, ((subfig, subfig+) | (graphic | figtable)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
pgstyle	(11X17 11X20.5 11X24 11X27.5 11X31 11X34.5 11X38 11X41.5 11X45)	#IMPLIED	Identifies available foldout pageset options.
blankapron	NUMBER	1	Toggle on whether you want a blankapron or not.
pgwide	NUMBER	1	Specifies if the graphic fills the page or column. Set it equal to "0", it will fit in column.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
place	(INLINE FLOAT)	FLOAT	How to place graphic
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
--------	--	----------	---

foldouts

Foldouts

Description: Container tag to support 5x8 foldout pages

Source paragraph: N/A

Content Model: (jgfoldoutwba+ | jgfoldoutnoba+)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

foldsect

Foldout Section

Description: Identifies the area where foldouts are placed when they are included at the end of the manual. This element is not marked as a chapter or section, but is merely a placeholder for the foldouts.

Source paragraph: 4.2.4.1d

Content Model: (foldout+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

followon

Followon Maintenance

Description: Defines instructions on returning equipment to the required condition.

Source paragraph: 3.4.3.2.1.2.2 MIL-PRF-83495B Amendment 1

Content Model: (para+ | none)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

paging	(FOLD ILLUS)	ILLUS	
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

foreword

Foreword

Description: Identifies the foreword of the manual. This element is identical to the "preface" and "introduction" elements, with the exception of the FOSI-generated title for that portion of the manual.

Source paragraph: 4.5.9

Content Model: para0, (para0 | applicdef | symsect | abbrsect | internatlstd | lrp | tctolist | ratd)*, tmimprep?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

front

Front Matter

Description: Identifies the front matter of the manual.

Source paragraph: 4.5

Content Model: idinfo, warnpage?, chginssht?, (lep | vollep), verstat?, tpdr?, chgrec?, (contents | volcontents), (illuslist | volilluslist)?, (tablelist | vtablelist)?, (foreword | preface | intro), safesum?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
t2page	NUMBER	0	A toggle that allows the author to turn the second title page on if necessary.
numcols	(1 2)	#REQUIRED	Set body to either one column or two columns.

ftnote

Footnote

Description: Identifies footnotes to paragraphs and tables. The footnote appears on the same page that the corresponding footnote reference (<ftnref>) occurs. Only the footnote whose "id" matches the "xrefid" specified in the footnote reference will appear. Footnotes to text will be displayed at the bottom of the page where the footnote is referenced

Source paragraph: 4.3.1n, 4.2.2

Content Model: ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+) | (randlist | deflist | seqlist))+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.

ftnref

Footnote Reference

Description: Identifies a reference to a footnote. This element will cause the footnote number/letter/symbol to appear at the point in the text where used, and will cause the footnote number/letter/symbol and the footnote text to appear at the bottom of the page.

Source paragraph: 4.3.1n

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
xrefid	IDREF	#REQUIRED	Allows the user to set up an external reference.
mark	(NUM SYM NUM ALPHA)		Number, symbol, alpha number to mark footnote.

func

Function Title for Job Guide Index

Description: Defines the function title in the job guide index.

Source paragraph: 3.4.4 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

funcno

Function Number

Description:

Source paragraph: N/A

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

function

Function

Description: Identifies the function in each chapter

Source paragraph: 3.4.3.2.1 MIL-PRF-83495B Amendment 1

Content Model: (%titles; , incond, (task, followon?)+) + (warning | caution | note | figure | table | foldouts)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
hcp	NUMBER	0	Hardness critical Processes. A HCP symbol will appear when set equal to "1".
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
fcp	NUMBER	0	Fracture Critical Process
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

funcitle

Function Title

Description: Defines the function title in the addcontents element.

Source paragraph: 3.4.3.1.1 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

gchapter

General Chapter

Description: Defines the optional first chapter of the job guide.

Source paragraph: 3.4.3.2 MIL-PRF-83495B Amendment 1

Content Model: (%titles;, para0+, function*) +(warning | caution | note | figure | table | foldouts)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

gchaptercontinue

General Chapter Continue

Description: Identifies a general chapter that is continued in a new volume.

Source paragraph:

Content Model: (para0+) + (%inclus;)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
gchapcont-start	NUMBER	#IMPLIED	Value used to start a continued chapter in a new volume.
lastpagenum	NUMBER	#IMPLIED	Allows you to continue the correct page number onto a new book/volume.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

glossary

Glossary

Description: Identifies the glossary of the manual.

Source paragraph: 4.2.9.7

Content Model: deflist

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

graphic

Graphic

Description: Identifies a graphic within a figure, or a graphic within running text or tables. If used within running text, no figure number or title will be generated. Note that the HCP and ESDS symbols can be placed in running text by using the "hcp" and "esds" elements. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: NONE

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
boardno	ENTITY	#REQUIRED	Allows the author to place the graphic name here.
graphsty	NMTOKEN	#IMPLIED	Graphic style
llcordra	CDATA	#IMPLIED	Lower left world coordinates (1,1). If scalefit="0" and repropid is not specified default is lower left.
rucordra	CDATA	#IMPLIED	Upper right world coordinates (10000,10000). If scalefit="0" and reprodep is not specified default is upper right.
repropid	NUTOKEN	#IMPLIED	Specifies the horizontal dimension of a graphic bounding box (width).
reprodep	NUTOKEN	#IMPLIED	Specifies the vertical dimension of a graphic bounding box (depth).
hscale	NUMBER	#IMPLIED	Horizontal Scaling
vscale	NUMBER	#IMPLIED	Vertical Scaling
scalefit	NUMBER	#IMPLIED	Scale to fit. No affect if hscale and vscale set to zero.
color	NUMBER	0	Option to choose color.

hazmat

Hazardous Material Name

Description: Identifies the hazardous material name used with a hazardous material warning icon.

Source paragraph: 4.3.10.1

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

hci

Hardness Critical Item

Description: Identifies the HCI symbol. Use of this element will cause the HCI symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the HCI symbol in a paragraph. The "hci" attribute should be used to place the HCI symbol between a paragraph/step number and text.

Source paragraph: 4.3.8.3.1 (MIL-STD 38784A DRAFT)

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

hcp

Hardness Critical Process Symbol

Description: Identifies the HCP symbol. Use of this element will cause the HCP symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the HCP symbol in a paragraph. The "hcp" attribute should be used to place the HCP symbol between a paragraph/step number and text.

Source paragraph: 4.3.10.3.1

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

icon

Hazardous Material Warning Icon

Description: Identifies the hazardous material warnings. The hazardous material warning consists of a graphic(s) (e.g. fire icon, poison icon, etc.), the hazardous material name, and the sequence number which identifies the order in which the hazardous material warnings are included in the safety summary. See Appendix A for further information on hazardous material warnings.

Source paragraph: 4.3.10.1

Content Model: graphic+, hazmat, seqno

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.

idinfo

Identification Information (Title Page)

Description: Identifies the title page and cover (if used) of the manual.

Source paragraph: 4.5.1

Content Model: tmidno+, pretmidno*, volnum?, revnum?, doctype, maintlvl?, prtitle, subtitle?, (mfr+, contractno+)?, seal?, superseded?, suppl*, effdatenot?, volnot?, discl?, distrib, expcont?, destr?, copyright*, cogact?, authnot, downgrd?, pubdate, (chgnum, chgdate)?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

illuslist

List of Illustrations

Description: Identifies the list of illustrations in the manual. This information is automatically compiled by the FOSI. If this element is not used, no list of illustrations will appear in the manual.

Source paragraph: 4.5.7

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

index

Index

Description: Identifies the index.
Source paragraph: 4.2.9.8
Content Model: (letter?, (preentry, secentry*)) *

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
numcols	(1 2)	#IMPLIED	Set body to either one column or two columns.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.

incond

Input Conditions

Description: Defines the input conditions in a function.
Source paragraph: 3.4.3.2.1.1 MIL-PRF-83495B Amendment 1
Content Model: (appl, reqcond, persreq, supeqp, consum, safecond, clreq?, addata)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

insertpg

Insert Page Column Entry

Description: Identifies an entry within the "Insert Page" column on the change instruction sheet.
Source paragraph: 4.7.3.10.2
Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

internatlst

International Standardization Agreement Note

Description: Identifies the international standardization agreement note. The paragraph number and title, of this note will be automatically generated by the FOSI.

Source paragraph: 4.5.9.1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

intro

Introduction

Description: Identifies the introduction of the manual. This element is identical to the "preface" and "foreword" elements, with the exception of the FOSI-generated title for that portion of the manual.

Source paragraph: 4.5.9

Content Model: para0, (para0 | applicdef | symsect | abbrsect | internatlstd | lrp | tctolist | ratd)*, tmimprep?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbassy

Assembly

Description: Identifies the assembly tag used in the MPL

Source paragraph: 3.6.4 MIL-PRF-38807

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbcage

Commercial and Government Entity

Description: Identifies the design activity or government agency whose number appears in the part number column of the MPL.

Source paragraph: 3.6.7.3 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbchap

Illustrated Parts Breakdown Chapter

Description: Identifies the Illustrated Parts Breakdown Chapter

Source paragraph: 4.11 (MIL-STD-38784A DRAFT)

Content Model: ipbfwordchap, ipbpl, ipbnumindx?, ipbrfdsindx?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

ipbdesc

Description

Description: Identified the description of each part listed in the MPL.

Source paragraph: 3.6.7.4 MIL-PRF-38807

Content Model: (nomen, ipbrefdes*, ipbsssn*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbesdsdesc

IPB Electrostatic Discharge Sensitive

Description: Identifies the esds in the IPB foreword

Source paragraph: 3.5.11 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process

oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbfigindex

Figure and Index Number

Description: Identifies the figure and index numbers in the MPL, the reference Index and the numerical index.

Source paragraph: 3.6.7.1, 3.7.2.2, 3.8.2.2 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbfigureno

Figure and Index Number

Description: Identifies the figure and index numbers in the MPL, the reference Index and the numerical index.

Source paragraph: 3.6.7.1 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbfinding

Finding

Description: Tag used for finding part numbers, illustrations, and descriptions.

Source paragraph: 3.5.3 MIL-PRF-38807

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcf	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
--------	--	----------	---

ipbfwordchap

Illustrated Parts Breakdown Foreword

Description: Identifies the first section of the ipb chapter

Source paragraph: 3.5 MIL-PRF-38807

Content Model: (para0+, ipbmodelcover, ipbserialization?, ipbfinding?, ipbsimassem?, ipbquickchgexpl?, ipbshtnoexpl?, ipbuseonexpl, ipbsmrexpl, ipbhcidesc?, ipbesdsdesc?, ipbpartstd, ipbmfrlist?, para0*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbgroup10

Group 10

Description: Tag used to create a space beneath every tenth listing in the reference and numerical indexes

Source paragraph: 3.7.2, 3.8.2 MIL-PRF-38807

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbhcidesc

IPB hardness Critical Items

Description: Identifies the HCI in the IPB foreword

Source paragraph: 3.5.10 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcg	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbmfrlist

Manufacturer List

Description: Identifies the manufacturer list in the ipb foreword

Source paragraph: 3.5.13 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcf	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbmodelcover

Model Covered

Description: Identifies the model(s) covered by the manual in the ipb foreword

Source paragraph: 3.5.1 MIL-PRF-38807

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbnumgrp

Numerical Group

Description: Container tag for the numerical index.

Source paragraph: 3.7 MIL-PRF-38807

Content Model: ((partno, ipbfigindex)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbnumindx

Numerical Index

Description: Identifies the third section in the ipb chapter.

Source paragraph: 3.7 MIL-PRF-38807

Content Model: (ipbnumgrp)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
autobuild	CDATA	#CONREF	Allows the contents to be automatically generated. Set autobuild="1".
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.

ipbpartname

Part Name

Description: Identifies the name of the part in the MPL.

Source paragraph: 3.6.7.4 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbpartstd

Parts Standardization

Description: Identifies a required paragraph in the ipb foreword.

Source paragraph: 3.5.12 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbpl

Maintenance Parts List

Description: Identifies the second section in the ipb chapter.

Source paragraph: 3.6 MIL-PRF-38807

Content Model: (ipbplgrp+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbpl0

Parts list - Indenture 0

Description: Indents the first nonindenture in the description column of the MPL

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl1*, ipbuseoncodelist?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	If set to "0" output will be "Not Illustrated".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

ipbplbrk

Parts List Break

Description: Tag used to put a break in the MPL

Source paragraph: MIL-PRF-38807

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbplgrp

Parts List Group

Description: Container tag for the parts list.

Source paragraph: MIL-PRF-38807

Content Model: (figure, ipbpl0tbl)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbpl0tbl

Parts list table

Description: Identifies the parts list table

Source paragraph: 3.6.7 MIL-PRF-38807

Content Model: (ipbpl0)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbpl1

Parts List - Indenture 1

Description: Identifies the first indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl2*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"

ipbpl2

Parts List - Indenture 2

Description: Identifies the second indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl3*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1">

ipbpl3

Parts List - Indenture 3

Description: Identifies the third indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl4*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".

attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1">

ipbpl4

Parts List - Indenture 4

Description: Identifies the fourth indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl5*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1">

ipbpl5

Parts List - Indenture 5

Description: Identifies the fifth indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl6*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1">

ipbpl6

Parts List - Indenture 6

Description: Identifies the sixth indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+), ipbpl7*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1">

ipbpl7

Parts List - Indenture 7

Description: Identifies the seventh indenture in the description column of the MPL.

Source paragraph: 3.6.7.4.1 MIL-PRF-38807

Content Model: (((ipbfigureno?, ipbfigindex, (partno, ipbpartnosym?, ipbcage, ipbdesc, ipbunits, ipbuseoncode?, ipbsmr codes, remarks?)+)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1"
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
shown	NUMBER	1	Will list "Not illustrated" if attribute is set to "0".
attachpart	NUMBER	0	Outputs (AP) in the nomen of the Parts List Table is set equal to "1">

ipbquickchgexpl

Quick Change Explanation

Description: Identifies the parts in kits or quick change units' paragraph in the ipbforeword.

Source paragraph: 3.5.5 MIL-PRF-38807

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbrefdes

Reference Designator

Description: Identifies the first column of the Reference Designator Index.

Source paragraph: 3.6.7.4, 3.8.2.1 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbrfdsgroup

Reference Designator Group

Description: Container tag for the reference designator index.

Source paragraph: 3.8 MIL-PRF-38807

Content Model: ((ipbrefdes?, ipbsssn?, ipbfigindex)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbrfdsindex

Reference Designator Index

Description: Identifies the fourth section of the ipb chapter.

Source paragraph: 3.8.1 MIL-PRF-38807

Content Model: (ipbrfdsgroup)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
autobuild	CDATA	#CONREF	Allows the contents to be automatically generated. Set autobuild="1".
type	(REFDES SSSN BOTH)	REFDES	Identified by what type of information.
cols	(2 3)	3	Allows author to choose two or three columns for this index.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

ipbserialization

Serialization

Description: Identifies the serialization paragraph in the ipb foreword.

Source paragraph: 3.5.2 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*, ipbsertable))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbsertable

Serialization Table

Description: Identifies the serialization table in the ipb foreword.

Source paragraph: 3.5.2 MIL-PRF-38807

Content Model: (title?, (nomen, modelno, serno)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
frame	(TOP BOT-TOM TOPBOT ALL SIDES NONE)	ALL	Allows you to choose what type of table frame you need.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to seperate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to seperate rows.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.

pgwide	NUMBER	1	Specifies if the graphic fills the page or column. Set it equal to "0", it will fit in column.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
leftind	CDATA	#IMPLIED	Allows authour to specify left indent if desired.
rightind	CDATA	#IMPLIED	Allows authour to specify right indent if desired.
topmar	NUTOKEN	#IMPLIED	Allows authour to specify top margin if desired.
botmar	NUTOKEN	#IMPLIED	Allows authour to specify bottom margin if desired.
mindepth	NUTOKEN	#IMPLIED	Minimum cell depth
pgdeep	NUMBER	0	Specifies that the table will fit page depth
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

ipbshtnoexpl

Sheet Number Explanation

Description: Identifies the sheet number explanation in the ipb foreword.

Source paragraph: 3.5.7 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)*, (step1, step1+)*, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbsimassem

Similar Assemblies

Description: Identifies the listing of similar assemblies in the ipb foreword.

Source paragraph: 3.5.4 MIL-PRF-38807

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbsmrcode

Source, Maintenance, and Recoverability (SMR) Codes

Description: Identifies the SMR codes in the MPL.

Source paragraph: 3.6.7.7 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbsmr codes

Source, Maintenance, and Recoverability (SMR) Codes

Description: Container element for the SMR codes.

Source paragraph: 3.6.7.7 MIL-PRF-38807

Content Model: (ipbsmrcode) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbsmrexpl

Source, Maintenance, and Recoverability (SMR) code explanation.

Description: Identifies the SMR codes in the ipb foreword.

Source paragraph: 3.5.9 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

ipbsssn

System, subsystem Sub-Subsystem Number

Description: Identifies the SSSN in the reference designator index.

Source paragraph: 3.6.7.4 & 3.8.2.1 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbunits

Units

Description: Identifies the units per assembly column in the MPL

Source paragraph: 3.6.7.5 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbuseoncode

Usable on code

Description: Identifies the useable on code column in the MPL.

Source paragraph: 3.6.7.6 MIL-PRF-38807

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ipbuseonodelist

Usable on code list

Description: Identifies the usable on code list at the end of the MPL.

Source paragraph: 3.6.7.6 MIL-PRF-38807

Content Model: (term, def)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
None			

ipbuseonexpl

Usable on code explanation

Description: Identifies the useable on code paragraphs in the ipb foreword

Source paragraph: 3.5.8 MIL-PRF-38807

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.

item

Item

Description: Identifies an item within a list. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: NONE

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

jgindex

Job Guide Index

Description: Defines the job guide index.

Source paragraph: 3.4.4 MIL-PRF-83495B Amendment 1

Content Model: (jgindextab)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

jgindextab

Job Guide Index Table

Description: Defines the job guide index table.

Source paragraph: 3.4.4 MIL-PRF-83495B Amendment 1

Content Model: (system, tmidno?, chapno?, (chap | func)+)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

jgfoldoutwba

Job Guide Foldout with a blank apron.

Description: Defines the foldout with a blank apron for a job guide

Source paragraph: 3.4.2.7 MIL-PRF-83495B Amendment 1

Content Model: (%titles;)?, ((subfig, subfig+) | ((graphic, legend?) | figtable)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
pgstyle	(8X10 8X11 8X13.5 8X17 8X20.5 8X24 8X27.5 8X31 11X17 11X20.5 11X24 11X27.5 11X31 11X34.5 11X38 11X41.5 11X44)	#IMPLIED	Identifies available foldout pageset options.
pagebreak	(RECTO VERSO NEXT OFF RECTOBB VERSOBF)	OFF	
blankapron	NUMBER	1	Toggle on whether you want a blankapron or not.
pgwide	NUMBER	1	Specifies if the graphic fills the page or column. Set it equal to "0", it will fit in column.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
place	(INLINE FLOAT)	FLOAT	How to place graphic

applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

jgfoldoutnoba

Job Guide Foldout with no blank apron.

Description: Defines the foldout with no blank apron for a job guide

Source paragraph: The source paragraph is: 3.4.2.7

Content Model: (%titles;)?, ((subfig, subfig+) | ((graphic, legend?) | figtable)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
pgstyle	(8X10 8X11 8X13.5 8X17 8X20.5 8X24 8X27.5 8X31 11X17 11X20.5 11X24 11X27.5 11X31 11X34.5 11X38 11X41.5 11X44)	#IMPLIED	Identifies available foldout pageset options.
pagebreak	(RECTO VERSO NEXT OFF RECTOBB VERSOBF)	OFF	

blankapron	NUMBER	1	Toggle on whether you want a blankapron or not.
pgwide	NUMBER	1	Specifies if the graphic fills the page or column. Set it equal to "0", it will fit in column.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
place	(INLINE FLOAT)	FLOAT	How to place graphic
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

legend

Legend

Description: A tabular listing of the index numbers/letters and their meanings.

Source paragraph: 4.6.17

Content Model: tabmat

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

lep

List of Effective Pages (LEP)

Description: Identifies the list of effective pages for the manual.

Source paragraph: 4.5.3

Content Model: chghist*, lepcontents

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

lepcontents

LEP Contents

Description: Contains the entries for the lep. The fosi automatically can generate this.

Source paragraph: 4.5.3

Content Model: lepentry+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
autobuild	CDATA	#CONREF	Allows the contents to be automatically generated. Set autobuild="1".

lepentry

LEP Entry

Description:

Source paragraph: 4.5.3

Content Model: leppage, lepchg

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

lepchg

LEP Change

Description:

Source paragraph: 4.5.3.1
Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

leppage

LEP Page

Description:

Source paragraph:

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

letter

Leter

Description: Letter heading for the index.

Source paragraph: 4.2.9.8

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

line

Line

Description: This element is used to indicate that a column or line should be forced at that point.

Source paragraph: N/A

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
prespace	CDATA	#IMPLIED	Allows the authour to set amount of space before/above the line used.
postspace	CDATA	#IMPLIED	Allows the authour to set amount of space after/below the line used.
quad	(LEFT CENTER RIGHT JUSTIFY)	LEFT	Allows the author to horizontally adjust this text.
indent	CDATA	#IMPLIED	Allows the author to indent this text.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

location

Location (Not Used; Under Review)

Description: Identifies the placement of a floating object such as a figure, table or figure table. This element is globally included on the document element.

Source paragraph: N/A

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

lrp

List of Related Publications

Description: Identifies the paragraph used to list related publications and the associated list.

Source paragraph: 4.5.9.2

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*),(((partno|(modelno|typedes)),(tmidno+,title)?)|lrpen-try*))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

Irpenry

List of Related Publications Entry

Description: Identifies an entry in the list of related publications. When the value of the id attribute is specified via the xrefid attribute of the extref element, the title of the publication appears.

Source paragraph: 4.5.9.2

Content Model: tmidno, title

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	ID	#REQUIRED	This allows you to identify each element and later reference it by its id value.

maintlvl

Maintenance Level

Description: Identifies the maintenance level of the manual (e.g. organizational, intermediate, depot, etc.) on the title page.

Source paragraph: 4.5.1.3.3

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mfr

Manufacturer

Description: Identifies the manufacturer of the equipment on the title page.

Source paragraph: 4.5.1.3.6

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mfrnad

Manufacturer's name and address

Description: Defines manufacturer's name and address in the consumable table

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

modelno

Model Number

Description: Identifies the model number of the equipment on the title page or difference data sheet.

Source paragraph:

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

modreq

Modification Request (Not Used; Under Review)

Description: The modification request element identifies a marking which document editors may place into the document instance to indicate where modification should be made. The element is used only in the review process and will not be used during document composition.

Source paragraph: 4.5.1.3.4, 4.7.3.3

Content Model: mrinfo?, mrmod, mrrespns?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrchgtxt

Modification Request Change Text (Not Used; Under Review)

Description: Identifies the modification request change text used to indicate editorial changes during document production. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: ANY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrngenmod

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: (mrpara | mrlist)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrinfo

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: ANY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrinstr

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: (mrpara | mrlist)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mritem

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrlist

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: (mritem+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrmod

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: (mrreason?, (mrngenmod| (mrinstr?, mrchgtxt)))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrpara

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrreason

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: (mrpara | mrlist)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

mrrespns

(Not Used; Under Review)

Description: This element is part of the electronic review process. Further information on this element will be provided as the documentation matures. The element is used only in the review process and will not be used during document composition.

Source paragraph:

Content Model: (mrpara | mrlist)*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

nomen

Nomenclature

Description: Identifies the nomenclature of the equipment on the title page and the difference data sheet.

Source paragraph: 4.5.1.3.4 & 4.7.3.3.1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

none

None

Description: Allows you to opt for "none".

Source paragraph:

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

NONE

note

Note

Description: Identifies a NOTE in the manual.

Source paragraph: 4.3.10

Content Model: (para*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

nsn

National Stock Number

Description: Identifies the national stock number of the equipment on the title page.

Source paragraph: 4.5.1.3.4

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

nsp

Description: Identifies the nsp symbol. Use of this element will cause the nsp symbol to appear at that point in the running text. The "nsp" attribute should be used to place the nsp symbol between a paragraph/step number and text.

Source paragraph: 4.3.10.21

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

oadr

Official Authority Downgrade Review Notice

Description: Identifies the official authority downgrade review notice on the title page. This notice is used only on classified manuals.

Source paragraph: 4.4 & 4.5.1.10

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

oci

Observable Critical Item

Description: Identifies the OCI symbol. Use of this element will cause the OCI symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the OCI symbol in a paragraph. The "oci" attribute should be used to place the OCI symbol between a paragraph/step number and text.

Source paragraph: 4.3.8.6.1 (MIL-STD 38784A DRAFT)

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

ocp

Observable Critical Process

Description: Identifies the OCP symbol. Use of this element will cause the OCP symbol to appear at that point in the running text. This element should only be used in running text, e.g. to define the OCP symbol in a

paragraph. The "ocp" attribute should be used to place the OCP symbol between a paragraph/step number and text.

Source paragraph: 4.3.8.6.1 (MIL-STD 38784A DRAFT)

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

para

Paragraph

Description: Identifies text within a paragraph without regard to title, heading, etc. For example, a NOTE consists of a heading and one or more paragraphs.

Source paragraph: 4.2.9.5

Content Model: ((#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | ap-
plicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp |
fcp | acronym | prindex | secindex)+) | (randlist | deflist | seqlist))+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
revchg	NUMBER	0	Used to generate a revision

para0

Primary Paragraph

Description: Identifies a primary paragraph within the manual.

Source paragraph: 4.2.9.5.1.1

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?,
subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".

esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
fcp	NUMBER	0	Fracture Critical Process
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

paratitle

Paragraph Title

Description: Identifies the paragraph title.

Source paragraph: 4.3e

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

partno

Part Number

Description: Identifies the part number of the equipment on the title page and on the difference data sheet.

Source paragraph: 4.5.1.3.4 & 4.7.3.3.1b

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

persreq

Personnel Recommended

Description: Defines the minimum number of personnel required to effectively perform the maintenance.

Source paragraph: 3.4.3.2.1.1.3 MIL-PRF-83495B Amendment 1

Content Model: (para) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

pgbrk

Page Break

Description: Identifies where a page will begin. Page breaks can be placed at the top of each logical page to identify where the page should start.

Source paragraph: 4.2.1.1

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
pgnumber	CDATA	#IMPLIED	Allows the author to assign the pgnumber.
chglevel	NMTOKEN	#IMPLIED	Specifies what level of change the manual is on.
emergency	(0 1)	#IMPLIED	If emergency is equal to "1", it will output the emergency border to signify emergency procedures.
shrink	CDATA	#IMPLIED	Used to shrink vertical space so that overflowed text will pull back to the desired page.
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
hyphflag	NUMBER	#IMPLIED	Toggle whether or not hyphen will be used for the last word on the last line.
paraflag	NUMBER	#IMPLIED	Toggle whether or not last para will split.

pgnumber

Page Number

Description: Identifies the page number.

Source paragraph: 4.2.1.4.2.1

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

phrase

Downgrade Phrase

Description: Identifies the text of the downgrade notice on the title page.

Source paragraph: 4.4

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

precaut

Precaution

Description: Identifies general safety precautions in the safety summary. The FOSI will automatically place a "bullet" to the left of each precaution.

Source paragraph: 4.5.10.1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

preface

Preface

Description: Identifies the preface of the manual. This element is identical to the "foreword" and "introduction" elements, with the exception of the FOSI-generated title for that portion of the manual.

Source paragraph: 4.5.9

Content Model: para0, (para0 | applicdef | symsect | abbrsect | internatlstd | lrp | tctolist | ratd)*, tmimprep?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

prentry

Primary Index Entry

Description: Used by author to identify primary entries that will be included in the index.

Source paragraph: 4.2.9.8

Content Model: topic

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

pretmidno

Previous Technical Manual Identification Number (Not Used; Under Review)

Description: Identifies the previous technical manual identification number of the manual on the title page. This element is used only when the manual number has been changed. The FOSI will automatically generate the 'Formerly' prefix preceding the former manual number.

Source paragraph:

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

prindex

Primary Index (Not Used; Under Review)

Description: The primary alphabetical index in the manual.

Source paragraph: 4.2.9.8

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

prtitle

Prime Title

Description: Identifies the title of the manual on the title page.

Source paragraph: 4.5.1.3e

Content Model: ((nomen, (modelno | partno | typedes | pslist | nsn)+, serno*) | subject)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

pslist

Part/Serial Number List

Description: Identifies a listing on the title page that corresponds a particular part number with associated serial numbers. This element could also be used to correspond model numbers with serial numbers, etc.

Source paragraph: 4.5.1.3.4

Content Model: (partno, serno)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

pubdate

Publication Date

Description: Identifies the basic date of the manual on the title page.

Source paragraph: 4.5.1.16

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

purpose

Purpose

Description: Identifies the purpose column in the reference table.

Source paragraph: 3.4.3.2.1.1.8 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

randlist

Random List

Description: Identifies a random list. All items within the random list will appear unnumbered, on separate lines, in the order they were entered by the author.

Source paragraph: NONE

Content Model: (title?, item+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
prefix	CDATA	#IMPLIED	If prefix is used, the bullets will not appear that are generally formatted by the fosi.

ratd

Record of Applicable Technical Directives

Description: Identifies the record of applicable technical directives paragraph and the associated table.

Source paragraph: 4.5.9.4

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*, (typeno, date?, title, ecpno?, dateinc?, remarks?)*))

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

rear

Rear Matter

Description: Identifies the rear matter of the manual.

Source paragraph: 4.2.9.6, 4.2.9.7, 4.2.9.8, & 4.6

Content Model: appendix*, glossary?, index?, foldsect?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
numcols	(1 2)	#REQUIRED	Allows the author to define one column or two.

reference

Reference

Description: Defines the reference column in the Consumable Table or the Reference Table

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

refertab

Reference Table

Description: Defines the Reference Table

Source paragraph: 3.4.3.2.1.1.8 MIL-PRF-83495B Amendment 1

Content Model: (reference, purpose) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

remarks

Remarks Entry

Description: Identifies an entry in the remarks column of the record of applicable technical directives.

Source paragraph: 4.5.9.4e

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

removepg

Remove Page Column Entry

Description: Identifies an entry within the "Remove Page" column on the change instruction sheet.

Source paragraph: 4.7.3.10.2

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

reqcond

Required Conditions

Description: Defines the prerequisites for tasks.

Source paragraph: 3.4.3.2.1.1.2 MIL-PRF-83495B Amendment 1

Content Model: (para+ | none)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

result

Result

Description: Defines the result in a function.

Source paragraph: 3.4.3.2.1 a MIL-PRF-83495B Amendment 1

Content Model: (para+, faultcode*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
person	CDATA	#IMPLIED	
deltypes	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

revnum

Revision Number

Description: Identifies the revision number of the manual on the title page.

Source paragraph: 4.8

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

row

Row

Description: Identifies a row in a table.

Source paragraph: 4.2.7

Content Model: (entry | entrytbl)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
rowsep	NUMBER	#IMPLIED	Allows the author to specify row separator width.
valign	(TOP BOTTOM MIDDLE)	#IMPLIED	Allow the author to vertically align text within table rows.

safecond

Safety Conditions

Description: Defines pertinent safety information to be included
Source paragraph: 3.4.3.2.1.1.6 MIL-PRF-83495B Amendment 1
Content Model: ((warning*, caution?, note?) | para)+ + (none)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

safesum

Safety Summary

Description: Identifies the safety summary of the manual. The title is automatically generated by the FOSI.
Source paragraph: 4.5.10
Content Model: para0+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

seal

Seal

Description: Department of the Navy Seal, with command identifier.

Source paragraph: 4.5.1.5

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

secentry

Secondary Index Entry

Description: Used by author to tag data for inclusion in the index as a secondary topic

Source paragraph: 4.2.9.8

Content Model: topic

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

secindex

Section Index (Not Used; Under Review)

Description: Identifies a section Index of the manual.

Source paragraph: 4.2.9.4

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
None			

section

Section

Description: Identifies a section of the manual, the next further breakdown of a chapter.

Source paragraph: 4.2.9.4

Content Model: title, para0+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

seqlist

Sequential List

Description: Identifies a sequential list. All items within the sequential list will appear numbered, on separate lines, in the order they were entered by the author.

Source paragraph: MIL-PRF-28001

Content Model: (title?, item+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
numstyle	(ALPHAUC ALPHALC ARABIC ROMANUC ROMANLC)	#IMPLIED	Allows the author to specify number style.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

seqno

Hazardous Material Warning Icon Sequence Number

Description: Identifies the sequence number of the hazardous material warning icons in the safety summary.

Source paragraph: (MIL-STD 38784A DRAFT)

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

serno

Serial Number

Description: Identifies serial numbers of the equipment on the title page and the difference data sheet.

Source paragraph: 4.5.1.3.4

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

sigblock

Signature Block

Description: Provides signature block.

Source paragraph: MIL-STD 38784A DRAFT

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

spanspec

Span Specification

Description: Used to join two or more columns in a table. Span specifications are similar to column specifications (<colspec>) except that they describe areas of the table that can be spanned (joined) using a table entry (<entry>). For example, a three-column table may have columns named "1", "2", and "3" respectively. A span named "23" may be declared using "spanspec". When "spanname='23'" is used on an "entry", that entry would occupy the space in both columns 2 and 3.

Source paragraph: MIL-PRF-28001 8.4.5.3

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
namest	NMTOKEN	#REQUIRED	Allows author to identify the column name to start the span.
nameend	NMTOKEN	#REQUIRED	Allows author to identify the column name to end the span.
spanname	NMTOKEN	#IMPLIED	Allows the author to identify the name of the span.
align	(LEFT RIGHT CENTER JUSTIFY CHAR)	CENTER	Allows you to align entered text.
charoff	NUTOKEN	#IMPLIED	Determines the distance the cell content should offset from the horizontal alignment character.
char	CDATA	#IMPLIED	Alignment Character
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to separate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to separate rows.

spec

Specification/PN

Description: Defines the specification number or part number column in the Consumable Table

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

spec

Specification

Description: Defines the specification number in the consumable table.

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

specinst

Special Instructions

Description: Defines the special instructions in the step.

Source paragraph: 3.4.3.2.1.2.1 e MIL-PRF-83495B Amendment 1

Content Model: (para)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
person	CDATA	#IMPLIED	
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

sssn

System/Subsystem/Subject Number

Description: Defines SSSN in the TOC and Job Guide Index.

Source paragraph: 3.4.3.1.1 & 3.4.4 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex) +

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

step

Step

Description: Defines the steps in the task.

Source paragraph: 3.4.3.2.1.2.1 MIL-PRF-83495B Amendment 1

Content Model: (warning*, caution?, note?, para, specinst*, result*, note?) + (hcp | esds)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
emergency	NUMBER	0	If emergency is equal to "1", it will output the emergency border to signify emergency procedures.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type

inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

step1

First Level Procedural Step

Description: Identifies a first level procedural step.

Source paragraph: 4.2.9.5.3

Content Model: warning*, caution?, note?, para, note?(step2, step2+)?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
emergency	NUMBER	0	If emergency is equal to "1", it will output the emergency border to signify emergency procedures.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level

delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

step2

Second Level Procedural Step

Description: Identifies a second level procedural step.

Source paragraph: 4.2.9.5.3

Content Model: warning*, caution?, note?, para, note?, (step3, step3+)?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
emergency	(0 1)	#IMPLIED	If emergency is equal to "1", it will output the emergency border to signify emergency procedures.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

revchg	NUMBER	0	Used to generate a revision
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

step3

Third Level Procedural Step

Description: Identifies a third level procedural step.

Source paragraph: 4.2.9.5.3

Content Model: warning*, caution?, note?, para, note?, (step4, step4+)?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
emergency	NUMBER	0	If emergency is equal to "1", it will output the emergency border to signify emergency procedures.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcg	NUMBER	0	Fracture Critical Process
hcg	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocg	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
hcg	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

revchg	NUMBER	0	Used to generate a revision
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

step4

Fourth Level Procedural Step

Description: Identifies a fourth level procedural step.

Source paragraph: 4.2.9.5.3

Content Model: warning*, caution?, note?, para, note?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
emergency	NUMBER	0	If emergency is equal to "1", it will output the emergency border to signify emergency procedures.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level

status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
--------	--	----------	---

subfig

Subfigure

Description: Identifies a subfigure. This element is used for multisheet illustrations, each sheet being a subfigure. The FOSI will automatically generate the sheet count (e.g 'Sheet 1 of 10', 'Sheet 2', etc.)

Source paragraph: 4.2.4.2

Content Model: ((graphic, legend?) | figtable)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
deltpe	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

subject

Subject

Description: Identifies the prime title of the manual on the title page.

Source paragraph: 4.5.1.3.4

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

subjinfo

Subject Information (Not Used; Under Review)

Description: Identifies subject information that appears at the top of every column in a chapter. This first "subjinfo" tag in a chapter should be placed after the chapter tag or the first section tag (if used). Additional "subjinfo" tags have no restrictions on placement and should be used wherever the information changes.

Source paragraph:

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

subpara1

First Subordinate Paragraph

Description: Identifies a first subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title, para, note?, (step1, step1+)?, subpara2*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcg	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item

ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subpara2

Second Subordinate Paragraph

Description: Identifies a second subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title?, para, note?, (step1, step1+)?, subpara3*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subpara3

Third Subordinate Paragraph

Description: Identifies a third subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title?, para, note?, (step1, step1+)?, subpara4*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcf	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subpara4

Fourth Subordinate Paragraph

Description: Identifies a third subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title?, para, note?, (step1, step1+)?, subpara5*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".

nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcf	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subpara5

Fifth Subordinate Paragraph

Description: Identifies a fifth subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title?, para, note?, (step1, step1+)?, subpara6*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcf	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subpara6

Six Subordinate Paragraph

Description: Identifies a six subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title?, para, note?, (step1, step1+)?, subpara7*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcp	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subpara7

Seventh Subordinate Paragraph

Description: Identifies a seventh subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title?, para, note?, (step1, step1+)?, subpara8*

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcf	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subpara8

Eighth Subordinate Paragraph

Description: Identifies a eighth subordinate paragraph.

Source paragraph: 4.2.9.5.1.2

Content Model: warning*, caution?, note?, title?, para, note?, (step1, step1+)?

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
nsp	NUMBER	0	Nuclear Surety Procedures. A **NSP** symbol will appear when set equal to "1".
fcf	NUMBER	0	Fracture Critical Process
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
hci	NUMBER	0	Hardness Critical Item
ocp	NUMBER	0	Observable Critical Process

oci	NUMBER	0	Observable Critical Item
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.

subtitle

Subtitle

Description: Identifies the subtitle of the manual on the title page.

Source paragraph: 4.5.1.3.5

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

supersed

Supersedure Notice

Description: Identifies the supersede notice on the title page.

Source paragraph: 4.5.1.6

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

supeqp

Support Equipment

Description: Defines the government approved support equipment.

Source paragraph: 3.4.3.2.1.1.4 MIL-PRF-83495B Amendment 1

Content Model: (para+ | none)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

suppl

Supplement Notice

Description: Identifies the supplement notice on the title page.

Source paragraph: 4.5.1.8

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

symsect

Symbol Paragraph

Description: Identifies the paragraph used to define symbols (e.g ESDS symbol) and the associated list.

Source paragraph: 4.5.9 & 4.3.4

Content Model: title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, sub-para1*, (symtitle?, (term, def)+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
rtermwidth	NUTOKEN	2.75IN	Allows you to set the right term width.
ltermwidth	NUTOKEN	0.75IN	Allows you to set the left term width.

label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

symtitle

Symbol Paragraph

Description: Identifies the title used to define symbols (e.g ESDS symbol) and the associated list.

Source paragraph: 4.5.9 & 4.3.4

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

system

System

Description: Defines the systems in the job guide index

Source paragraph: 3.4.4 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

table

Table

Description: Identifies a table.

Source paragraph: 4.2.7

Content Model: title, tgroup

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
frame	(TOP BOT- TOM TOPBOT ALL SIDES NONE)	ALL	Allows you to choose what type of table frame you need.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to seperate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to seperate rows.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
pgwide	NUMBER	1	Specifies if the table fills the page or column width. Set it equal to "0", it will fit in column.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
leftind	CDATA	#IMPLIED	Allows authour to specify left indent if desired.
rightind	CDATA	#IMPLIED	Allows authour to specify right indent if desired.
topmar	NUTOKEN	#IMPLIED	Allows authour to specify top margin if desired.
botmar	NUTOKEN	#IMPLIED	Allows authour to specify bottom margin if desired.
mindepth	NUTOKEN	#IMPLIED	Minimum cell depth
pgdeep	NUMBER	0	Specifies that the table will fit page depth
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assiged to this element.

tablelist

List of Tables

Description: Identifies the list of tables in the manual. This information is automatically compiled by the FOSI. If this element is not used, no list of tables will appear in the manual.

Source paragraph: 4.5.8

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tabmat

Table Material

Description:

Source paragraph: 4.3.9

Content Model: tgroup+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
tabstyle	NMTOKEN	#IMPLIED	
frame	(TOP BOT- TOM TOPBOT ALL SIDES NONE)	ALL	Allows you to choose what type of table frame you need.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to seperate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to seperate rows.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
pgwide	NUMBER	1	Specifies if the table fills the page or column. Set it equal to "0", it will fit in column.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
leftind	CDATA	#IMPLIED	Allows authour to specify left indent if desired.
rightind	CDATA	#IMPLIED	Allows authour to specify right indent if desired.
topmar	NUTOKEN	#IMPLIED	Allows authour to specify top margin if desired.
botmar	NUTOKEN	#IMPLIED	Allows authour to specify bottom margin if desired.
mindepth	NUTOKEN	#IMPLIED	Minimum cell depth
pgdeep	NUMBER	0	Specifies that the table will fit page depth
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

task

Task

Description: Defines the task in a function.
Source paragraph: 3.4.3.2.1.2 MIL-PRF-83495B Amendment 1
Content Model: (title, step+, tasksp?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
fcp	NUMBER	0	Fracture Critical Process
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

tasksp

Task on the same page

Description: Defines the occurrence of two tasks on the same page.
Source paragraph: 3.4.3.2.1.2.1 MIL-PRF-83495B Amendment 1
Content Model: (title, step+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
hcp	NUMBER	0	Hardness critical Processes. A **HCP** symbol will appear when set equal to "1".
esds	NUMBER	0	Electrostatic Discharge Sensitive. All paragraphs which address handling or maintenance which could damage esds parts shall be identified by the esds symbol by setting attribute equal to "1".
ocp	NUMBER	0	Observable Critical Process
oci	NUMBER	0	Observable Critical Item
fcp	NUMBER	0	Fracture Critical Process
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

tbody

Table Body

Description: Identifies the body of a table (e.g. material below the boxheads).

Source paragraph: 4.3.9

Content Model: row+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
valign	(TOP MID- DLE BOT- TOM)	TOP	

tctolist

Time Compliance Technical Orders Paragraph

Description: Identifies the time compliance technical orders paragraph and the associated table.

Source paragraph: 4.5.9.3

Content Model: ((title, warning*, caution?, note?, (para, note?)?, (step1, step1+)?, subpara1*, tctotbl?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

tctono

Time Compliance Technical Order Number

Description: Identifies an entry in the TCTO Number column in the TCTO table.

Source paragraph: 4.5.9.3

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tctorow

Time Compliance Technical Orders Row

Description: Identifies a row in the time compliance technical orders table.

Source paragraph: 4.5.9.3

Content Model: (tctono, title, date)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tctotbl

Time Compliance Technical Order Table

Description: Identifies the table that lists all TCTOs applicable to the manual. The FOSI will automatically generate the table title and the column headings (boxheads).

Source paragraph: 4.5.9.3

Content Model: (tctorow+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

term

Term

Description: Identifies an entry in the term portion of a list. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: 4.3.4

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tfnid

Table Footnote Id

Description: This element is for placing a footnote in a 38784 table model. A superscript will be placed at this point in the table and the footnote value will be placed at the bottom of the table if a table footnote display is created.

Source paragraph: 4.2.7.5

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
id	ID	#IMPLIED	This allows author to identify each element and later reference it by its id value.
tfntype	(NUM AL-PHA SYM)	NUM	Allows author to decide how the table footnote will be marked.
tfnsymbol	CDATA	#IMPLIED	Allows author to choose a symbol to use to mark table footnote.
tfnval	CDATA	#IMPLIED	Allows author to assign a value to the table footnote.

tfhref

Table Footnote Reference

Description: This element is for referencing a footnote in a 38784 table model that was created with a table footnote id. The superscript that was generated from the table footnote id will be placed at this point in the table and the footnote value will be placed at the bottom of the table if a table footnote display is created.

Source paragraph: 4.2.7.5

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
xrefid	IDREF	#REQUIRED	Allows the user to set up an external reference.

tfoot

Table Foot

Description: The foot of the table.

Source paragraph: 4.2.7.5

Content Model: (tfnid*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tfndisplay

Table Footnote Display

Description: This element is for displaying footnotes in a 38784 table model. Footnotes to tables will be displayed at the end of the table. This element should be placed in a span in the last row of the table.

Source paragraph: 4.2.7.5

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tgroup

Table Group

Description: Identifies a table group, which consists of a table heading (boxheads) and a table body.

Source paragraph: 4.2.7

Content Model: (colspec*, spanspec*, thead?, tbody)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
cols	NUMBER	#REQUIRED	Allows author to specify number of columns in table.
align	(LEFT RIGHT CENTER JUSTIFY CHAR)	#IMPLIED	Allows you to align entered text.
charoff	NUTOKEN	#IMPLIED	Determines the distance the cell content should offset from the horizontal alignment character.
char	CDATA	#IMPLIED	Alignment Character
leftmar	NUTOKEN	#IMPLIED	Allows you to define a left margin if desired.
rightmar	NUTOKEN	#IMPLIED	Allows you to define a right margin if desired.
topmar	NUTOKEN	#IMPLIED	Allows you to define a top margin if desired.
botmar	NUTOKEN	#IMPLIED	Allows you to define a bottom margin if desired.
mindepth	NUTOKEN	#IMPLIED	Allows you to define a minimum depth if desired.
colwidth	CDATA	#IMPLIED	Allows you to define the column widths.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to seperate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to seperate rows.

thead

Table Heading (Boxheads)

Description: Identifies a table heading (boxheads). The table heading (boxheads) repeat when the table breaks across a column or page.

Source paragraph: 4.2.7.3

Content Model: colspec*, row+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
valign	(TOP MID-DLE BOT-TOM)	BOTTOM	

title

Title

Description: Identifies a title (e.g. chapter, paragraph, table, etc.). The title should be tagged exactly as it is to appear in the table of contents. Titles that are placed on tables will appear in the List of Tables, and titles that are placed on figures and figure tables will be placed in the List of Illustrations. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: MIL-STD-38784

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tmidno

Technical Manual Identification Number

Description: Identifies the technical manual identification number. When used on the title page (<idinfo>), it will cause the technical manual number to appear on the title page and at the top of each page in the manual. When used in the list of related publications (<lrp>), will cause the technical manual number to be placed in the "Publication Number" column.

Source paragraph: 4.2.1.5 & 4.5.9.2

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
-----------	------	---------	-------------

service	(AF NAVAIR NAVSEA SPAWARS ARMY MC DLA CG DOD)	#IMPLIED	Author must identify what service is used.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
revchg	NUMBER	0	Used to generate a revision
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

tmimprep

Technical Manual Improvement Report

Description: Identifies the technical manual improvement report paragraph.

Source paragraph: 4.5.9

Content Model: ((title,warning*,caution?,note?,(para,note?)?,(step1,step1+)?,subpara1*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type

inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

toc

Table of Contents

Description: Defines the table of contents for the job guide.

Source paragraph: 3.4.3.1.1 MIL-PRF-83495B Amendment 1

Content Model: (contentsentry*, contents, contentsentry*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

topic

Index topic

Description: Used by author to tag topics that will be appear in the index. Used as subelement for prentry and secentry.

Source paragraph: 4.2.9.8

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
page	CDATA	#REQUIRED	

tpdr

Technical Publications Deficiency Report

Description: Identifies the technical publications deficiency report list.

Source paragraph: 4.5.9

Content Model: (tpdrtbl | none)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tpdrtbl

Technical Publications Deficiency Report

Description: Identifies the technical publications deficiency report list.

Source paragraph: 4.5.9

Content Model: (activity, tpdrno, tpdrlocation)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
tabstyle	NMTOKEN	#IMPLIED	
frame	(TOP BOT-TOM TOPBOT ALL SIDES NONE)	ALL	Allows you to choose what type of table frame you need.
colsep	NUMBER	#IMPLIED	Allows you to include a vertical line to seperate columns.
rowsep	NUMBER	#IMPLIED	Allows you to include a horizontal line to seperate rows.
orient	(PORT LAND1)	PORT	Allows you to specify the orientation of the graphic and/or table. Options are portrait and landscape.
pgwide	NUMBER	1	Specifies if the graphic fills the page or column. Set it equal to "0", it will fit in column.
id	ID	#IMPLIED	This allows you to identify each element and later reference it by its id value.
leftind	CDATA	#IMPLIED	Allows authour to specify left indent if desired.
rightind	CDATA	#IMPLIED	Allows authour to specify right indent if desired.
topmar	NUTOKEN	#IMPLIED	Allows authour to specify top margin if desired.
botmar	NUTOKEN	#IMPLIED	Allows authour to specify bottom margin if desired.
mindepth	NUTOKEN	#IMPLIED	Minimum cell depth
pgdeep	NUMBER	0	Specifies that the table will fit page depth
applicref	IDREFS	#REQUIRED	Allows you to assign an applicable reference to this element.
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.

label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
delttype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

tpdrlocation

Technical Publications Deficiency Report Location

<i>Description:</i>	Identifies the volume, part, chapter, etc. where the technical publications deficiency report information has been included in the manual.
<i>Source paragraph:</i>	4.5.9
<i>Content Model:</i>	#PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

tpdrno

Technical Publications Deficiency Report Number

<i>Description:</i>	Identifies an entry in the "Report Control Number" column of the technical publications deficiency report list.
<i>Source paragraph:</i>	4.5.9
<i>Content Model:</i>	#PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

typedes

Type Designation

Description: Identifies a type designation on the title page and the difference data sheet.

Source paragraph: 4.5.1.3.4 & 4.7.3.3.1B

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

typeno

Directive Type and Number

Description: Identifies an entry in the "Type/No" column of the record of applicable technical directives table.

Source paragraph: 4.5.9.4a

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

use

Use

Description: Defines the purpose and primary use of each item in the consumable table.

Source paragraph: 3.4.3.2.1.1.5 MIL-PRF-83495B Amendment 1

Content Model: (#PCDATA | change | tabmat | ftnref | xref | verbatim | emphasis | applicabil | graphic | extref | dataiden | hcp | hci | esds | nsp | oci | ocp | fcp | acronym | prindex | secindex)+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

verbatim

Verbatim Text

Description: Identifies a block of text where text layout will remain as it appears in the tagged instance. All spaces/carriage returns will be preserved, and no spaces or carriage returns will be added by the system. The FOSI will use a monospace font to format verbatim text. This element is included to allow the author flexibility in composing the manual in accordance with this spec.

Source paragraph: MIL-PRF-28001

Content Model: CDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

verstat

Verification Status Page

Description: Identifies the verification status page in the manual. This information is automatically compiled by the FOSI. This element should not be used if a verification status page is not desired.

Source paragraph: 4.5.4

Content Model: (tabmat?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

vollep

Volume List of Effective Pages

Description: Identifies the volume List of Effective Pages.

Source paragraph: 4.2.9.1

Content Model: (chghist*, vollepcontents)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

volleppcontents

Volume Contents

Description: Identifies the volume.

Source paragraph: 4.2.9.1

Content Model: 1epentry+

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
autobuild	CDATA	#CONREF	Allows the contents to be automatically generated. Set autobuild="1".

volnot

Volume Notice

Description: Identifies the volume notice on the title page.

Source paragraph: 4.2.9.1

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

volnum

Volume Number

Description: Identifies the volume number on the title page.

Source paragraph: 4.2.9.1

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

volume

Volume

Description: Identifies a volume.

Source paragraph: 4.2.9.1

Content Model: ((front | auxfront), body, rear?)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.
sssn	CDATA	#IMPLIED	System, Subsystem, or Subject Number can be assigned to this element.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
docid	CDATA	#IMPLIED	Document identification
docstat	(REVISION CHANGE PRELIM DRAFT FORMAL)	PRELIM	Author can stipulate what form the manual is in.
service	(AF NAVAIR NAVSEA SPAWARS ARMY MC DLA CG DOD)	#REQUIRED	Author must identify what service is used.
volpages	NUMBER	0	Turns volume page numbering on and off.
verstatpg	(VER UN-VER)	VER	Author can set to "verified" or "unverified".
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

volcontents

Volume Contents

Description: Identifies a volume contents.

Source paragraph:

Content Model: #PCDATA

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
autobuild	CDATA	#CONREF	Allows the contents to be automatically generated. Set autobuild="1".
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.

volilluslist

Volume Illustration List

Description: Identifies a volume list of illustrations.

Source paragraph: 4.2.9.1

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

votablelist

Volume Table List

Description: Identifies a volume list of tables.

Source paragraph: 4.2.9.1

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

warning

Warning

Description: Identifies a WARNING in the manual. Multiple warning tags may be used only when it is desired to change the warning icon (standard or hazardous warning graphic).

Source paragraph: 4.3.10

Content Model: (icon?, para*)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.

warnpage

Warning Page

Description: Identifies the warning page(s) of the manual.

Source paragraph: 4.5.2

Content Model: (wpgentry+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
verdate	CDATA	#IMPLIED	Identifies the date of verification.
verrem	CDATA	#IMPLIED	Identifies verification remarks.
verstatus	(UNVERIFIED VERIFIED)	"UNVERIFIED"	Identifies verification status.
deltype	"DELETE REAL RESERVE NA"	#IMPLIED	Used to generate change packages - Delete Type
inschlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Insert Change Level
delchlvl	NMTOKEN	#IMPLIED	Used to generate change packages - Delete Change Level
status	"EMPTY DELETED RESERVED NOTAPP"	#IMPLIED	Allows you to specify the status of this element.
label	CDATA	#IMPLIED	Allows you to label this paragraph manually. The fosi will automatically do this for you, so its use is not necessary unless a label out of the ordinary is desired.

wpgentry

Warning Page Entry

Description: Identifies an individual warning on the warning page(s).

Source paragraph: 4.5.2

Content Model: (title, para+)

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
NONE			

xref

Cross-reference

Description: Identifies a cross-reference to a paragraph, figure, table, etc.

Source paragraph: 4.6.16.2

Content Model: EMPTY

ATTRIBUTE LIST

Only these attributes are applicable and supported by the fosi.

Attribute	Type	Default	Description
xrefid	IDREF	#REQUIRED	Allows the user to set up an external reference.

